


## INSTALLATION INSTRUCTIONS


# Bobrick 6069 Toilet Partition Slide Latch

### In-swing and Out-swing Doors

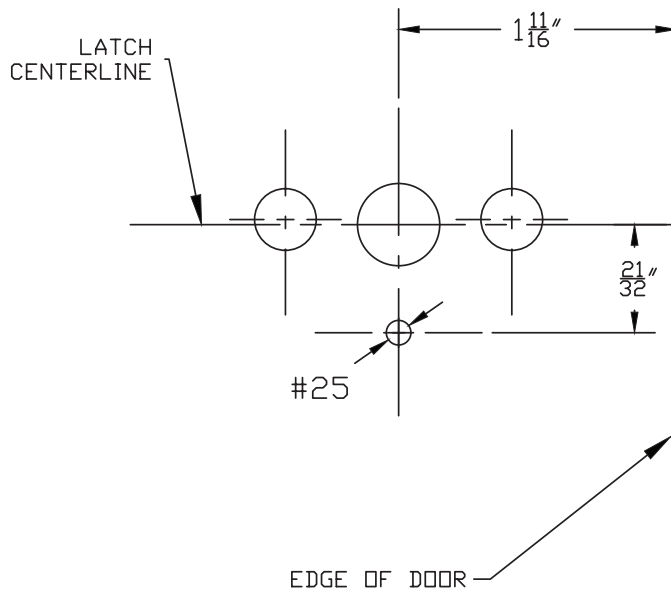

#### LATCH INSTALLATION

- A. Using the hole guide provided, place the centerline of the center hole on the latch centerline, 1-11/16" from the door edge, prep the holes shown on the hole guide.
- B. Using the guide above, prep the #25 hole 1-11/16" from the edge of the door and 21/32" below the latch centerline.
- C. Using two 8-18x1-1/2" screws, through the 3/8" holes on the door attach the latch mechanism to the round black plate, placing the silver pull between the black plate and the door.
- D. Using the 5/8" flatheaded screw, secure it in the bottom hole of the black plate, in the #25 size hole drilled in the door.
- E. Take the occupied indicator, and the square spindle, placing the square spindle into the door latch first, then place the occupied indicator on the square spindle and push until it fits over the black plate and is secure.

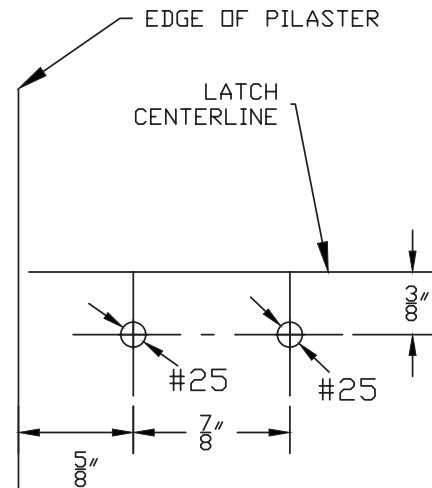

#### KEEPER INSTALLATION

- A. Using the diagram above, prep the two #25 holes for the keeper.
- B. Using the keeper (in-swing doors also require the spacer provided), use the two 5/8" panhead screws and attach the keeper to the pilaster using the two #25 holes previously drilled.